 
 





D8-2173



D8-2174



D8-1360

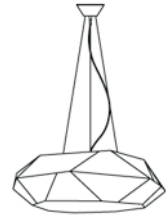

D8-1361

INSTALLATION AND USER INSTRUCTION

WARNING: KEEP THESE INSTRUCTIONS

Safety can only be guaranteed when users follow these instructions precisely. Always disconnect the fitting from the mains when working on it. Panzeri Carlo Srl is not responsible for any damage to persons and/or property resulting from improper installation, misuse, or unauthorized modifications made to their products.

ARTICLES

D8-2173 2 X MAX 26W GX24q2/3

D8-2174 3 X MAX 26W GX24q2/3

D8-1360 2 X MAX 26W GX24q2/3

D8-1361 3 X MAX 26W GX24q2/3



LAMP INSTALLATION GUIDE (FOR MODELS D8-2173, D8-2174)

- Insert the wires into hole (A) of wall-bracket (B)
- Attach the bracket (B) to the wall
- Connect the wires to the terminal (C) after covering them with the glass sleeving
- Insert the bulbs (D)

-Insert the lampshade fixing it safely to (E) rings

LAMP ASSEMBLY (FOR MODELS D8-1360, D8-1361)

- Open canopy (1) by unscrewing the cone (2)
- The bracket (3) will come with a round plate for J-Box (4) and they are attached together already. (shown separately here)
- (4) Attach the round plate with the bracket to the J-Box.
- (5) and on the other side connect the wires from the lamp and the ground wire of the canopy
- Close the canopy (1) by tightening the cone (2)
- Adjust the length of steel cable by sliding it through the automatic clamp (6) To unlock the clamp, simply press the pin (6a)
- Insert the bulbs
- Attach the lampshade (7) and tighten the screws (8)

BALANCING THE LAMPSHADE


If the lampshade is not in position after the installation, adjust the length of its cables through the clamp (6).

MAINTENANCE

We recommend using only a soft cloth when cleaning the device. In case of stubborn dirt, dampen the cloth, and use neutral soap if necessary. DO NOT use alcohol and /or solvents.

To clean the fabric, follow the directions on the label.

To place the fabric on the lampshade align the label with washing instructions with the orange sticker on the structure, and arrange the fabric to cover each corner of the lampshade.

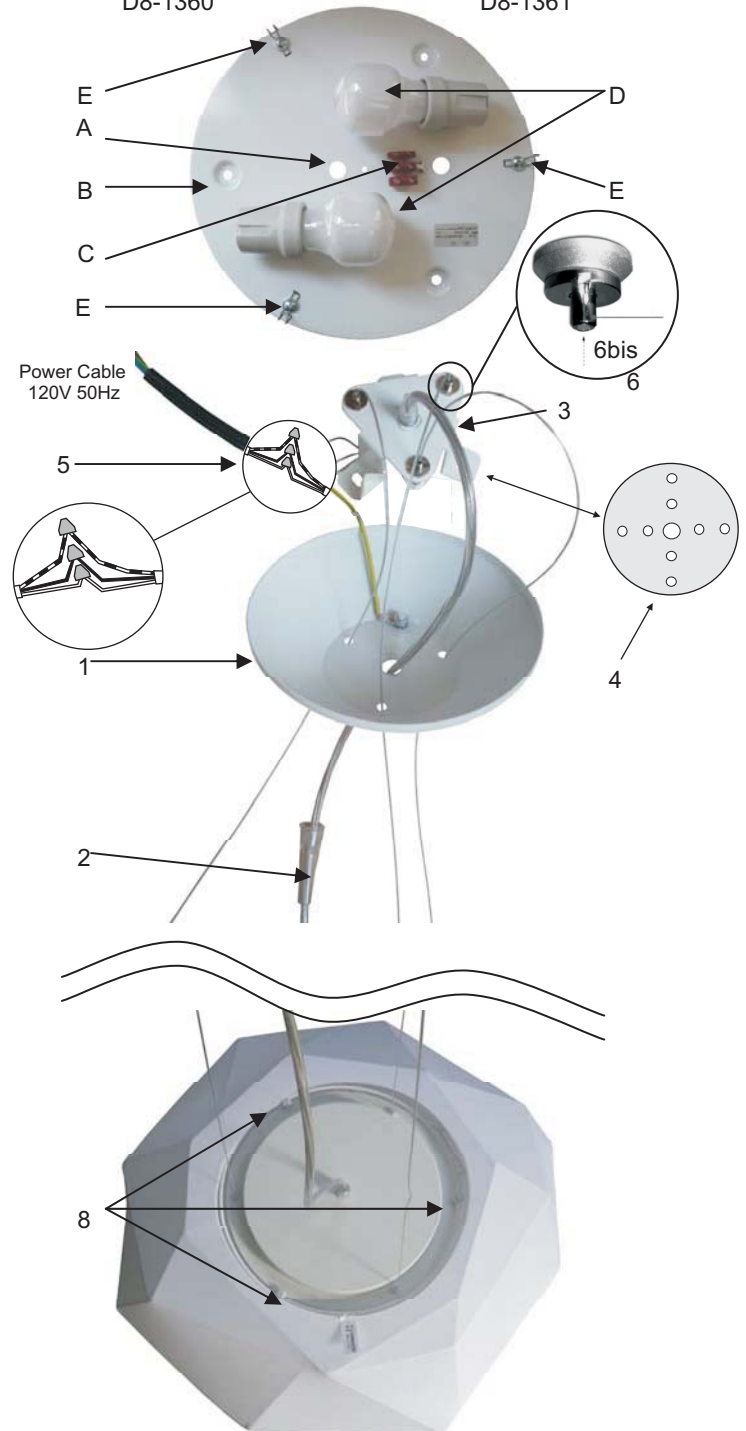

Devices that use springs self-protected against explosions do not require screens.

Approved by CSA for CANADIAN & US Safety Standard.

The unit can not be disposed of with normal household waste under Directive 2002/96/EC in the field of electrical appliances (waste electrical and electronic equipment - WEEE). This directive defines the standards for the collection and recycling of used appliances as applicable throughout the European Union. To return your used device, please use the return and collection systems available to the individual countries of use.

Hand wash maximum temperature 40°

Do not dry by means of a rotary drum dryer

Do not bleach with chlorine

Do not iron