

D8-3312.....D8-3315
8.5W 960lm 120V

D8-3316..... D8-3319
17W 1920lm 120V

For following models:

D8-3312, D8-3313, D8-3314, D8-3315,
D8-3316-D8,3317, D8-3318 AND D8-3319



OPERATION AND USE INSTRUCTIONS

ATTENTION: KEEP THESE INSTRUCTIONS

The safety of this fitting is only guaranteed with the use of the instruction.



Disconnect before any action on fitting.

Zaneen is not responsible for any damage to persons and/or property resulting from improper installation, misuse, or unauthorized modifications made to their products.


- Extract the reflector (A) from the fixture by pulling the sheet with the written instruction TIRARE, PULL

IMPORTANT: Do not use tools (screwdrivers, scissors, etc...)

- Remove the side (B) by loosening the two bolts (C)
- Disconnect the pins (D) and detach the side (B) from the base (E).
- Fix the base (E) on the wall.
- Connect the wires from the mains to the terminal (F) following the instructions on the terminal.
- Connect the connector (D).
- Replace the side (B) on the base (E) and tighten the two bolts (C).
- Replace the reflector (A) into the base (E) placing the cut side of the reflector over the power supply.

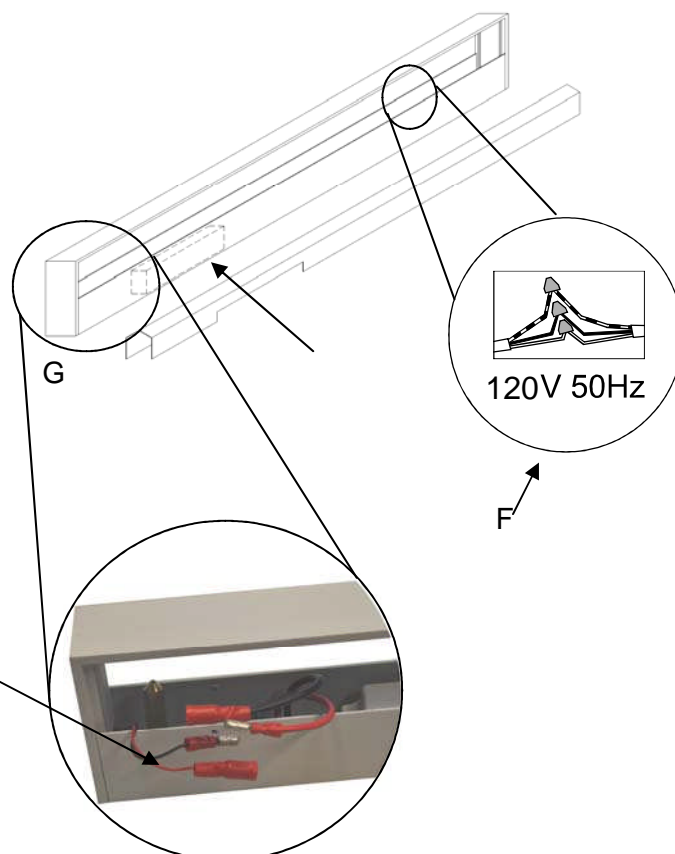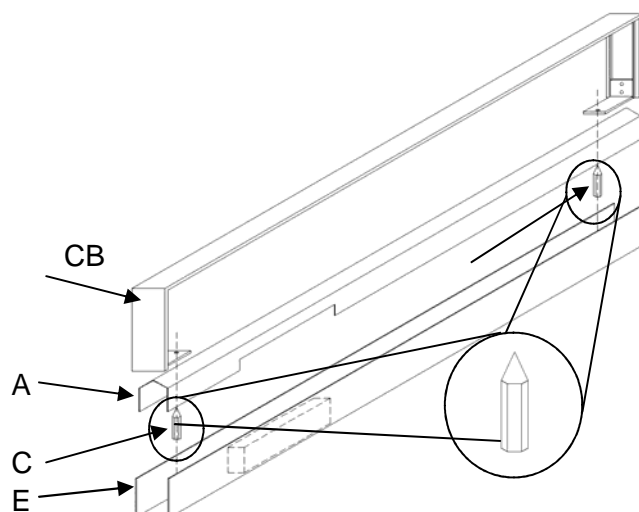

 Approved by North American Standards

 The device may not be disposed of with household rubbish. This appliances is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU. To return your used device, please use the return and collection systems available to you.