FRISBEE BOLLARD
INSTALLATION GUIDE

ZANEEN®

IP 65

In a constant effort to supply the best product, we reserve the right to change specifications or materials without notice. The most recent specification sheets are found at zaneen.com

IP 65

FRISBEE

ISTRUZIONI DI MONTAGGIO - ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

Copri Base



L10A0054

Pozzetto XL

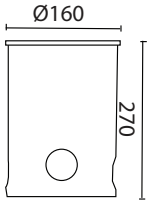

L10A0036

Muffola IP68



82
L10A0003

CARATTERISTICHE TECNICHE - TECHNICAL FEATURES - CARACTERISTIQUE TECHNIQUES

IP 65

Protetto contro la polvere e i getti d'acqua
Protected against dust and splashing
Protégé contre la poussière et les jets d'eau

Apparecchio di classe II
Class II light fixture
Appareil de classe II

F

Apparecchio idoneo al montaggio su superfici normalmente infiammabili
Light fixture which can be mounted on normally infiammable surfaces
Appareil qui peut être installé sur surfaces normalement inflammables

AVVERTENZE GENERALI - GENERAL WARNING - AVERTISSEMENTS GENERAUX

I La sicurezza dell'apparecchio è garantita solo con l'uso appropriato delle seguenti istruzioni, pertanto è necessario conservarle. La sicurezza dell'apparecchio ed il grado di protezione all'ingresso di corpi solidi e/o liquidi (IP65) è garantito solo con vano ottico installato su palo ø 60 mm.
Per apparecchi con sorgenti Led, la sorgente luminosa contenuta deve essere sostituita solo dal costruttore o dal suo servizio di assistenza o da personale altrettanto qualificato.
N.B. Prima di procedere alla connessione dell'apparecchio in rete assicurarsi che sia tolta tensione.

GB The fitting's safety is guaranteed only with appropriate use of the following instructions, so it's necessary to keep themThe fitting's safety and the protection degree against penetration of solid/liquid objects IP65 is guaranteed only with optical installed on pole ø60 mm.
With reference Led luminaire's, the light source contained shall only be replaced by the manufacturer or his service agent or a similar qualified person.
Before proceeding with the connections of the fitting be sure that there's no voltage.

F La sécurilé de l'appareil est garanlie seulement avec l'utilisation approprié des instructions suivantes; il est donc nécessaine de les garder. La sécurité approprié et le degré de protection contre la pénétration de corps solides / liquides IP65 est garanti uniquement avec optique installé sur pôle ø 60 mm.
En référence luminaires à Led, la source de lumière contenue ne doit être remplacé par le fabricant ou son agent de service ou une personne qualifiée.
P.S. Avant de procéder à la connexion de l'appaneil au réseau, assunez-vous que la tension soil enlevée.

In a constant effort to supply the best product, we reserve the right to change specifications or materials without notice. The most recent specification sheets are found at zaneen.com

ZANEEN

IP 65

ISTRUZIONI DI MONTAGGIO - ASSEMBLY INSTRUCTIONS - INSTRUCTIONS DE MONTAGE

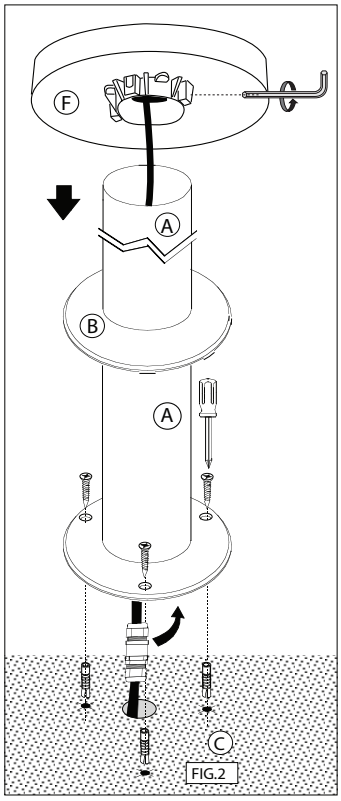

FIG.2

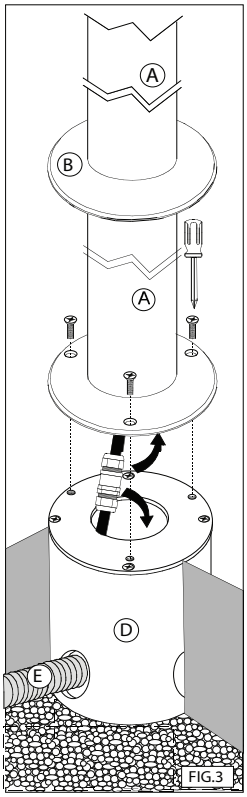

FIG.3

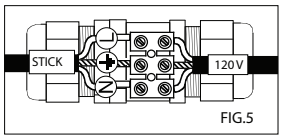

FIG.5

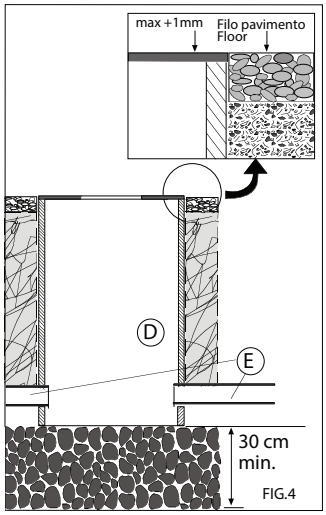

FIG.4

I

- Se si utilizza l'accessorio copri base B, prima dell'installazione inserirlo dall'alto sul paloA (ø60).FIG.2
- Inserire il cavo di alimentazione all'interno del palo A, montare il vano ottico F sul palo A (ø60), facendo pressione fino ad inserirlo nella sua sede. Bloccare il vano ottico F sul palo A tramite 4 grani M5 inox. FIG.2

FRISBEE A PAVIMENTO
- Fissare a pavimento l'apparecchio con tasselli e viti adeguate usando come dima l'apparecchio stesso.FIG.2

FRISBEE CON POZZETTO
- Prima di interrare e/o cementare il pozzetto, fare attenzione a creare nella zona di alloggiamento uno strato di ghiaia di drenaggio sufficiente a garantire l'eventuale deflusso dell'acqua (minimo 30 cm). Interrare e/o cementare il pozzetto D avendo cura di posizionarlo in bolla e non tenerlo mai al di sotto del filo del terreno.FIG.3/4 Introdurre negli appositi fori del pozzetto il tubo o i tubi rigidi E per il passaggio dei cavi. FIG.3/4

FRISBEE CON COLLEGAMENTO ELETTRICO
- Dopo essersi assicurati che il cavo di rete non sia in tensione collegarlo all'apparecchio tramite muffola che ne mantenga l' IP. (vedi nostro articolo L10A0003 IP 63).FIG.5

GB

- If you use the accessory base plate B, before installing add on top pole A (ø60). FIG2
- Insert the supply cable inside the pole A mounting the optical tray F on pole A (ø60), and press until it snaps into place. Block optic tray F on pole A within 4 inox grub screw M5. FIG.2

FRISBEE ON THE FLOOR
- Fix the unit to the floor trough anchors and appropriate screws using the unit as a template. FIG.2

FRISBEE WITH PIT
- Before putting and/or cementing the pit, paying attention to have a layer of gravel to ensure the correct draining of the water (minimum 30 cm). Lay and/or cementing the pit D, taking care to place it in a bubble and never keep it under the level of the ground. FIG.3/4

  Introduce into the holes of the pit the pipe or the rigid pipes E in order to insert the cable.FIG.3/4

ELECTRICAL CONNECTION OF THE FRISBEE
- Check carefully that there is no tension and connect the fitting by a junction box that maintains the IP grade. (see our article L10A0003 IP68).FIG.5

F

- Si vous utilisez l'accessoire plaque de base B, avant d'installer ajouter sur le dessus pôle A (ø60).FIG.2
  Insérez le câble d'alimentation à l'intérieur du pôle A, montage optiques F en pole A (ø60), appliquant une pression jusqu'à ce qu'elle se mette en place.
  Bloquer optiques F sur le pôle A dans 4 grains en inox M5 FIG.2.

FRISBEE SUR LE SOL
- Fixer l'unité au sol avec chevilles et vis appropriées en utilisant l'appareil comme un modèle. FIG.2

FRISBEE AVEC PUISARD
- Avant de enterrer et/ou cimenter le puisard, faire attention à créer dans la zone de logement une couche de gravier de drénage suffisant pour assurer l'écoulement de éventuel de l'eau (minimum 30 cm). Enterrer et/ou cimenter le puisard D en prenant soin de le placer dans une bulle et de ne jamais garder sous le niveau du sol FIG.3/4.
- Intoduire dans les trous du puisard la conduite ou les conduites rigides E pour le passage des câbles FIG.3/4.

FRISBEE AVEC CONNEXION ÉLECTRIQUE
- Vérifier soigneusement que le câble réseau est hors tension, connecter l'appareil par une boîte de jonction qui maintient le grade IP. (voir notre article L10A0003 IP63)FIG.5

In a constant effort to supply the best product, we reserve the right to change specifications or materials without notice. The most recent specification sheets are found at zaneen.com

ZANEEN®

Post Sales Support
HQ 1-800-388-3382 support@zaneen.com

EN

- Installation and electrification must be carried out by a qualified electrician, only.
- Observe all relevant building codes and regulations.
- Prior to installation or repair: disconnect power; it is the installer's responsibility to ensure for all electrical, mechanical and thermal compatibility.
- The LED light source contained in this fixture shall only be replaced by Zaneen, or a person approved by Zaneen.
- Recommendations: Keep the instruction sheet(s) in the event of maintenance and/or disassembly.

Access detailed spec sheets from www.zaneen.com

FR

- L'installation et l'électrification doivent être effectuées uniquement par un électricien qualifié.
- Respectez tous les codes du bâtiment et réglementations en vigueur.
- Avant l'installation ou la réparation: débranchez l'alimentation électrique; Il incombe à l'installateur des'assurer de la compatibilité électrique, mécanique et thermique.
- La source de lumière LED contenue dans ce luminaire ne doit être remplacée que par Zaneen, ou une personne approuvée par Zaneen.
- Recommandations: Conservez la (les) fiche (s) d'instructions en cas de maintenance et / ou de démontage

Accéder aux fiches techniques détaillées sur www.zaneen.com

In a constant effort to supply the best product, we reserve the right to change specifications or materials without notice. The most recent specification sheets are found at zaneen.com

WARRANTY SUMMARY

ZANEEN

Disclaimer: Applicable only when Zaneen's lighting ¬fixtures are properly installed on correct line voltage, and under normal conditions of use.

Zaneen Warranties are itemized below:

- All products to be free from defect in materials and workmanship: 1 Year (12 months) Limited Warranty from the invoice date (excluding lamps)
- LED engines and Power Supplies: 5 Years Limited Warranty from the invoice date.
- Transformers and Ballast Warranty: 3 years Limited Warranty from the invoice date.
- Purchaser's sole recourse after the warranty period, for defective power supplies, ballasts or other components manufactured by a third party, is against such third-party manufacturer.

Warranty claims regarding the product(s) must be submitted in writing within 30 days, of discovery of the defect.

Zaneen uses only electrical components, which are produced by responsible manufacturers. Components that may fail in service within the warranty period, under normal use, will be replaced at no charge.

Zaneen will not assume labour or transportation charges in connection with replacement of such parts, nor for removal or re-installation of equipment or parts, nor for consequential damages or losses.

The warranty extended to Zaneen by the manufacturers of the electrical components is passed on to our customers.

At its option, Zaneen will repair or replace, any fixture defective as provided herein if such fixture is returned by the purchaser within the warranty period, provided Zaneen has issued a written "Return Goods Authorization". Such repair or replacement is the exclusive remedy against Zaneen and Zaneen is not responsible for damage of any sort whatsoever, including incidental and consequential damages or losses.

This warranty extends only to replacement defective fixtures or components and no allowance will be made for labour or transportation charges in connection with replacement of such parts, nor for removal or re-installation of equipment or parts unless specifically authorized in writing by Zaneen prior to any work being performed.

This warranty only applies when the products are installed in applications in which ambient temperatures are within normal temperatures and are operated within the electrical values shown on the LED driver label.

Zaneen Interior rated luminaries are not protected from environmental conditions, such as salt content from sea air. Therefore, anydamages resulting from exposure to salt air, or other harmful environmental conditions, will not be covered under Zaneen Warranty.

In a constant effort to supply the best product, we reserve the right to change specifications or materials without notice. The most recent specification sheets are found at zaneen.com

Zaneen will not be responsible under warranty for any failure of the product that results directly or indirectly from improper installation and/or external causes such as: acts of nature, physical damage, and exposure to adverse or hazardous chemicals or other substances, use of harsh cleaning agent or harsh chemicals.

Warranty for any substantial deterioration in the product finish caused by failure to clean, inspect or maintain the finish of the product. The end user is responsible for the structural integrity of existing foundations, anchorages, or structures and all consequences arising from their use.

Zaneen will not be responsible under warranty for any failure of the product that results directly or indirectly from improper installation and/or external causes such as: acts of nature, physical damage, and exposure to adverse or hazardous chemicals or other substances, use of harsh cleaning agent or harsh chemicals.

The end user is responsible for the structural integrity of existing foundations, anchorages, or structures and all consequences arising from their use.